



# BEAUTY BED

## THERAPY BED MASSAGE BED


---







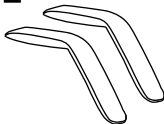
Pfילו GmbH

6154-0006


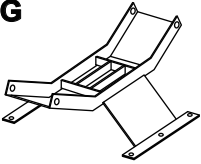
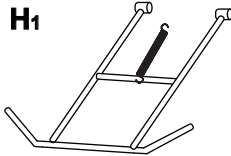
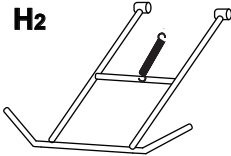
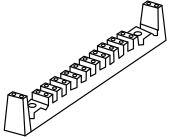
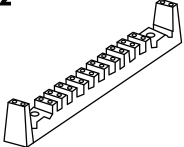
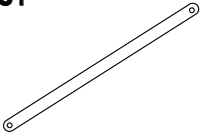
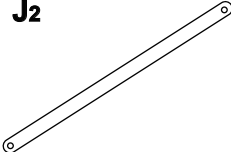

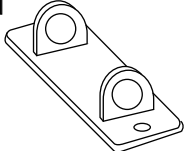
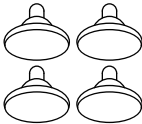







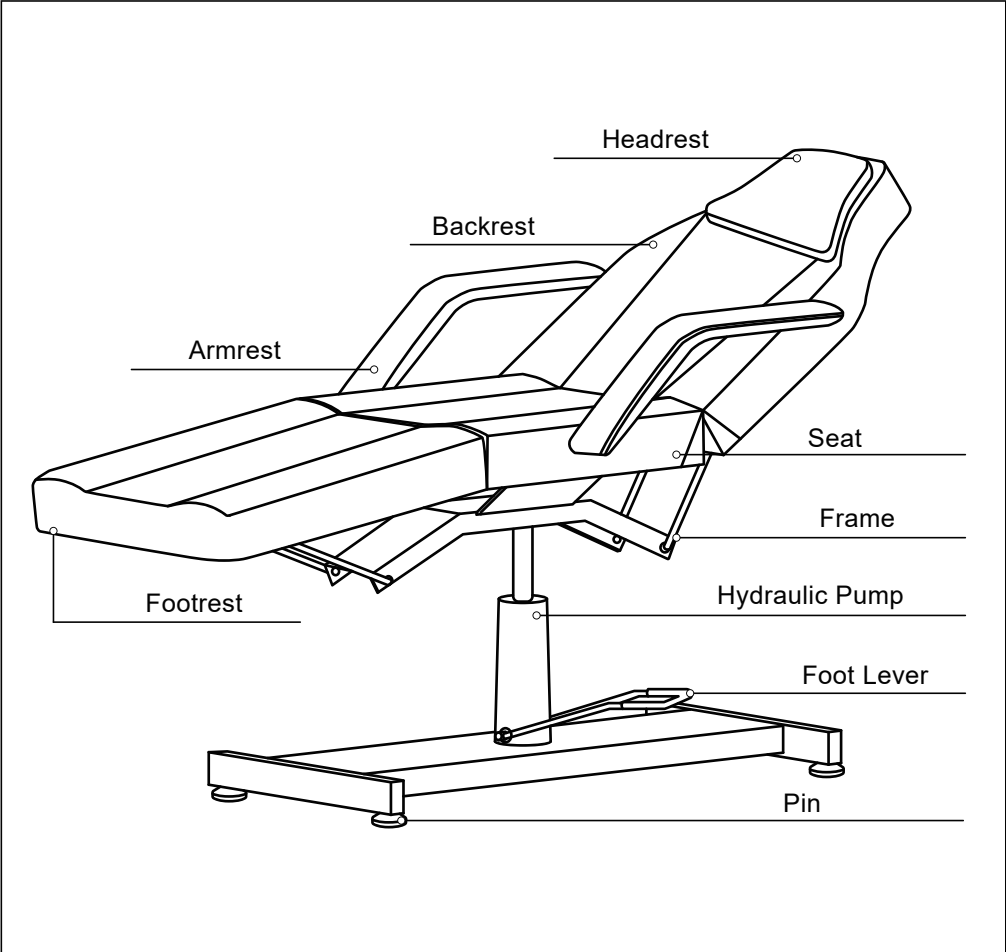



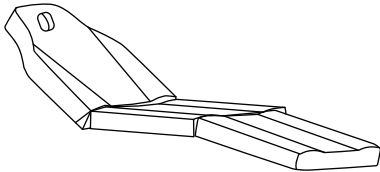

# Installation



## Accessories

<div><b>A</b></div> <div></div> <div><div>Backrest 1X</div><div>Seat 1X</div><div>Footrest 1X</div></div>	<div><b>B</b></div> <div></div> <div><div>Foot Lever 1X</div></div>		
<div><b>C</b></div> <div></div> <div><div>Hydraulic Pump 1X</div></div>	<div><b>D</b></div> <div></div> <div><div>Headrest 1X</div></div>	<div><b>E</b></div> <div></div> <div><div>Armrest 2X</div></div>	


# Installation

Accessories			
<b>F</b>  Base 1X	<b>G</b>  Frame 1X	<b>H1</b>  T-Beam with long spring 1X	<b>H2</b>  T-Beam with short spring 1X
<b>I1</b>  Short Serrated Strip 2X	<b>I2</b>  Long Serrated Strip 2X	<b>J1</b>  Short Aluminium Strip 2X	<b>J2</b>  Long Aluminium Strip 2X
<b>K</b>  L-Beam 1X	<b>M</b>  Accessory 1X	<b>L</b>  Pin 4X	
Screw group			
<b>AA</b>  M8X25 6X	<b>AB</b>  M10X30 1X	<b>AC</b>  M8X40 8X	<b>AD</b>  M4X20 8X
<b>AE</b>  M6X20 2X	<b>AF</b>  ø10 1X	<b>AG</b>  ø10 4X	<b>AH</b>  ø8 6X
<b>AI</b>  ø10 5X	<b>AJ</b>  ø8 6X	<b>AK</b>  ø6 4X	<b>AL</b>  M6 4X
<b>AM</b>  1X			

# Installation

**1**

**Note the red arrows on the serrated strips.**

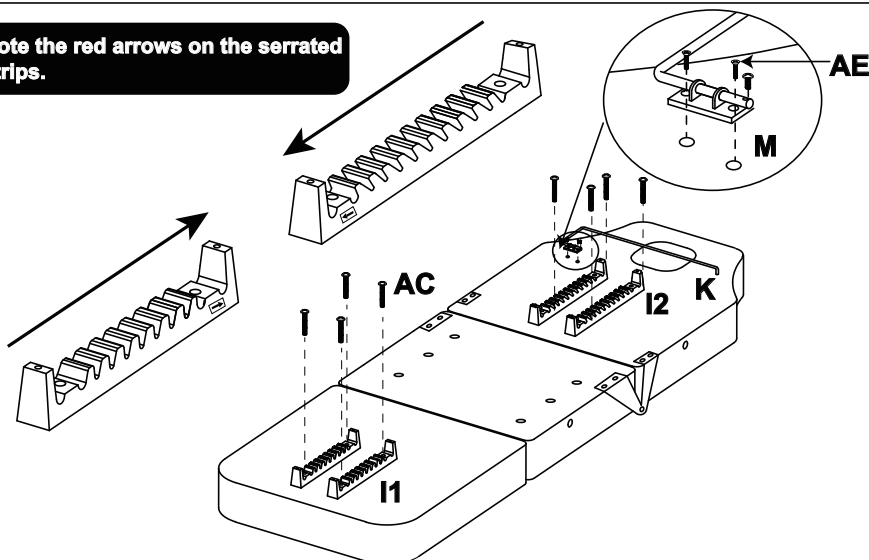


1.1 Install the short serrated strip (I1) on the footrest and the long serrated strip (I2) on the backrest with the screws (AC).

1.2 Install the accessory (M) on the backrest with screws (AE).

1.3 Insert the L-beam (K) into the accessory (M) and lock it with the screws preinstalled.

**2**

**Note the different length of springs.**

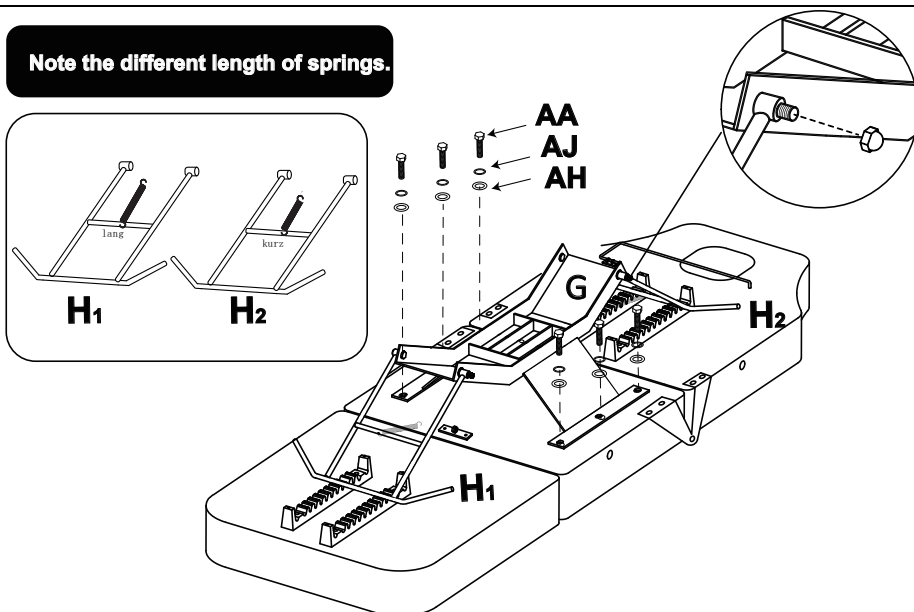


2.1 Install the frame (G) on the seat with screws (AA/AJ/AH).

2.2 Install the T-beam with long spring (H1) and the T-Beam with short spring (H2) with screws preinstalled.



# Installation


**3**

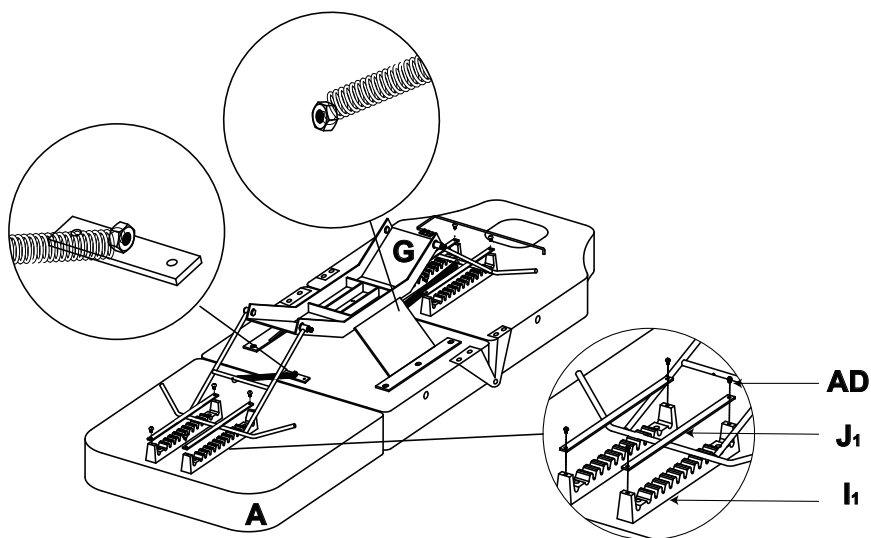

3.1 Place the T-beams (H1/H2) between the serrated strips (I1/I2) and install the aluminium strips (J1/J2) with screws (AD) on the serrated strips.

3.2 Connect the end of long spring with the seat and the end of short spring with the frame (G).

**4**

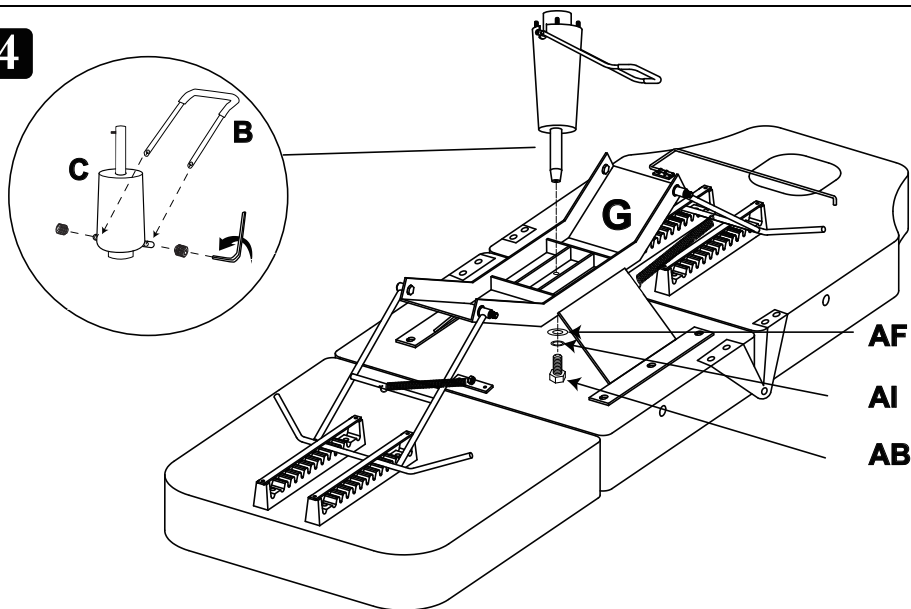


4.1 Install the foot lever (B) on the pump (C) with screws preinstalled.

4.2 Install the pump (C) on the frame (G) with screws (AB/AI/AF).

# Installation


**5**

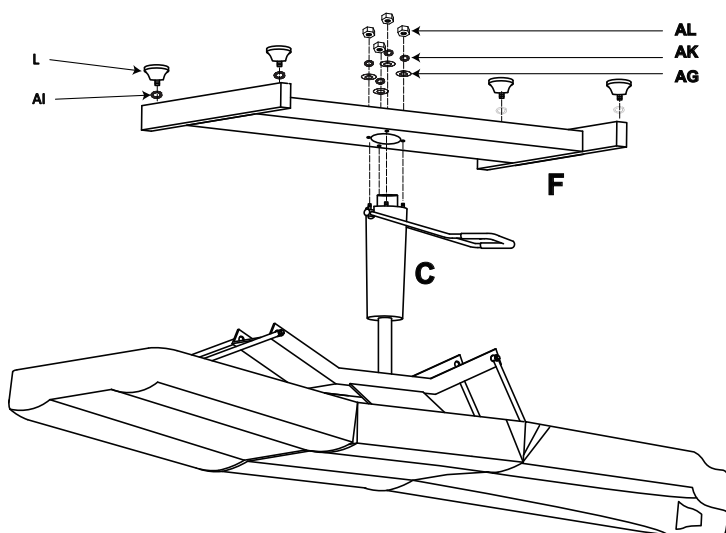

5.1 Install the pump (C) on the base (F) with screws (AG/AK/AL).

5.2 Install the pins (L) and spring gaskets (AI) on the base (F).

**6**

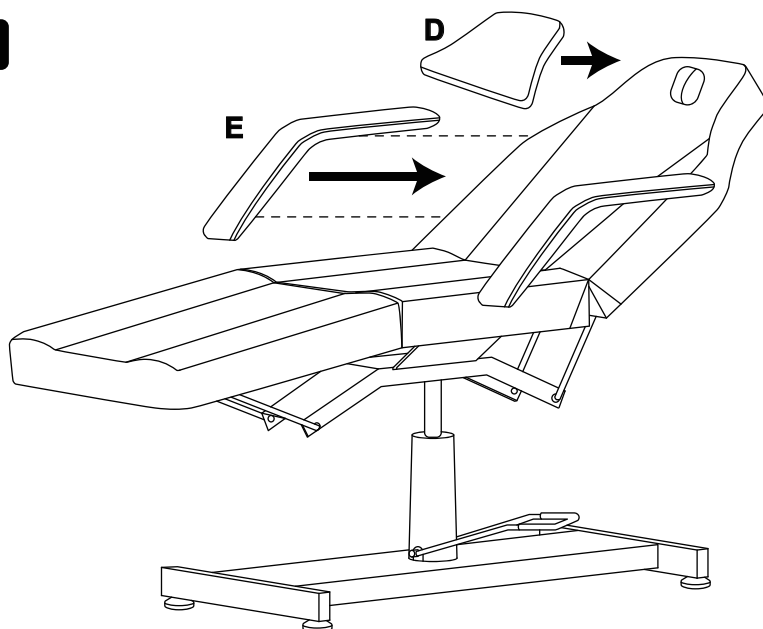

6.1 Connect the armrest (E) and the headrest (D).



## Pfillo GmbH

Adresse: Kreuzweg 60, 47809 Krefeld

E-Mail: [pfillo.de@gmail.com](mailto:pfillo.de@gmail.com)

©Barberpub; 1. Auflage 2022



[Amazon.de](https://www.amazon.de)



[Barberpub.de](https://www.Barberpub.de)