

ASSEMBLY INSTRUCTIONS

A-43 PCS



B-43 PCS



C-8 PCS



Wooden dowels

D-4 PCS



(20mm)

E-1 PC




(98mm)

F-1 PC



(128mm)

G-1PC



H-4PCS



(16mm)

U-43PCS




Cam covers

J-4PCS



(50mm)

M-2PCS



N-16PCS



(15mm)

P-2PCS



(35mm)

Q-1 PC



Allen key tool

R-2 PCS



S-4 PCS




(M8*50mm)

T-4PCS




(M5*60mm)




















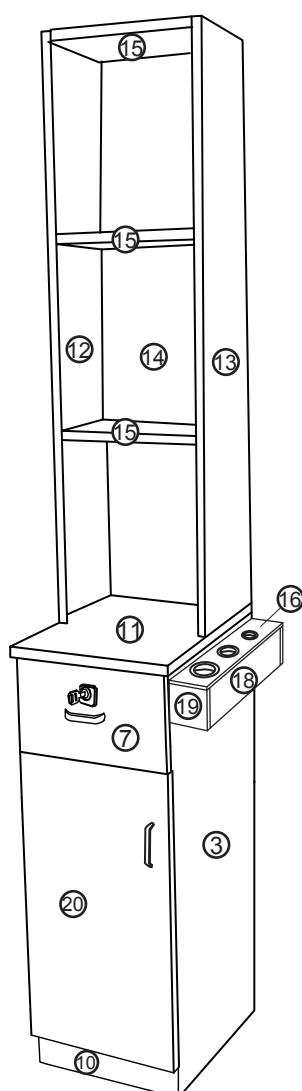


6154-5206

Additional tools required:
1 x Philips cross-head screwdriver.


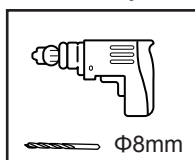


1x Drill & 1x 8mm wood drill bit.

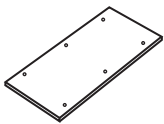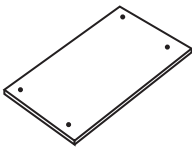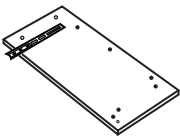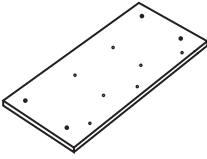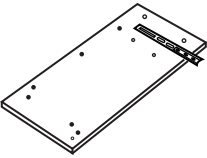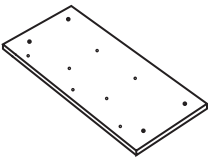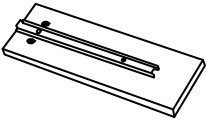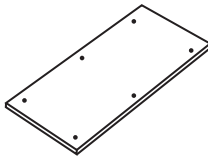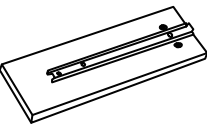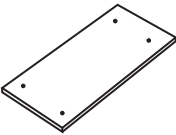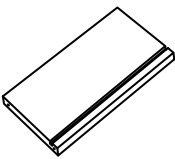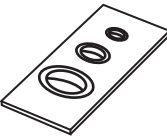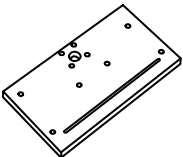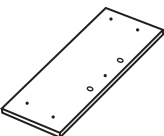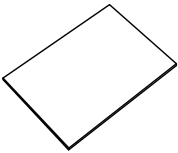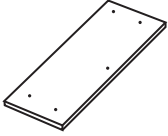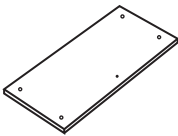
| | | | | | | | |
|------------------------------------------------------------------------------------|------------|---|---|--------------------------------------------------------------------------------------|------------|---|---|
|  | 830*298*16 | 1 | ① |  | 337*332*16 | 1 | ⑪ |
|  | 830*320*16 | 1 | ② |  | 930*179*16 | 1 | ⑫ |
|  | 830*320*16 | 1 | ③ |  | 930*179*16 | 1 | ⑬ |
|  | 250*90*16 | 1 | ④ |  | 930*298*16 | 1 | ⑭ |
|  | 250*90*16 | 1 | ⑤ |  | 298*160*16 | 3 | ⑮ |
|  | 241*90*16 | 1 | ⑥ |  | 300*130*16 | 1 | ⑯ |
|  | 329*150*16 | 1 | ⑦ |  | 266*100*16 | 1 | ⑰ |
|  | 244*251*5 | 1 | ⑧ |  | 266*100*16 | 1 | ⑱ |
|  | 298*301*16 | 1 | ⑨ |  | 128*100*16 | 2 | ⑲ |
|  | 298*80*16 | 1 | ⑩ |  | 590*330*16 | 1 | ⑳ |

DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.


1

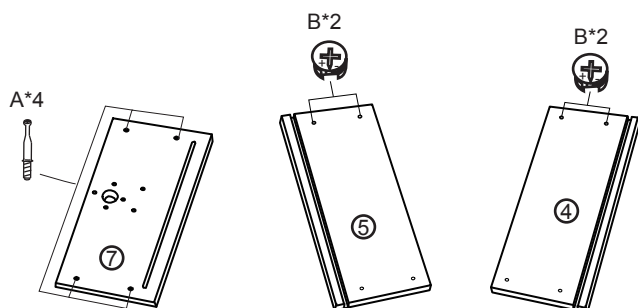


2

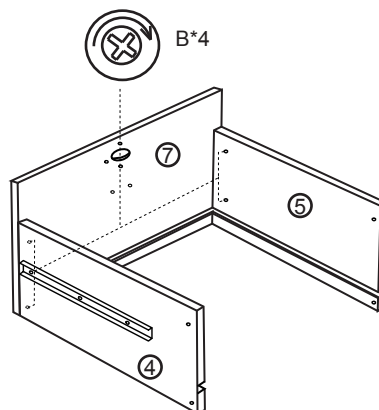


3

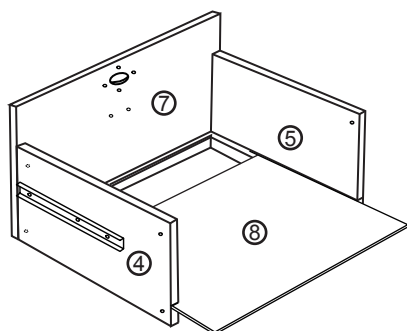

4

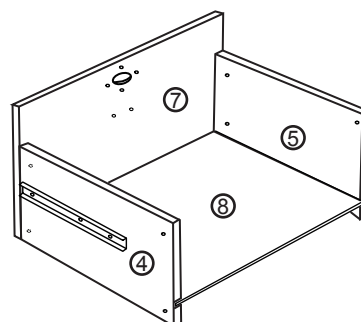


5

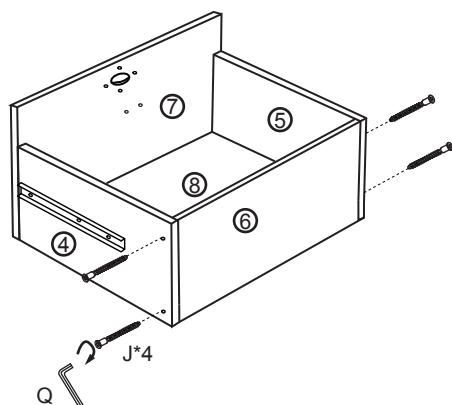


6

Separate the lock parts as below.


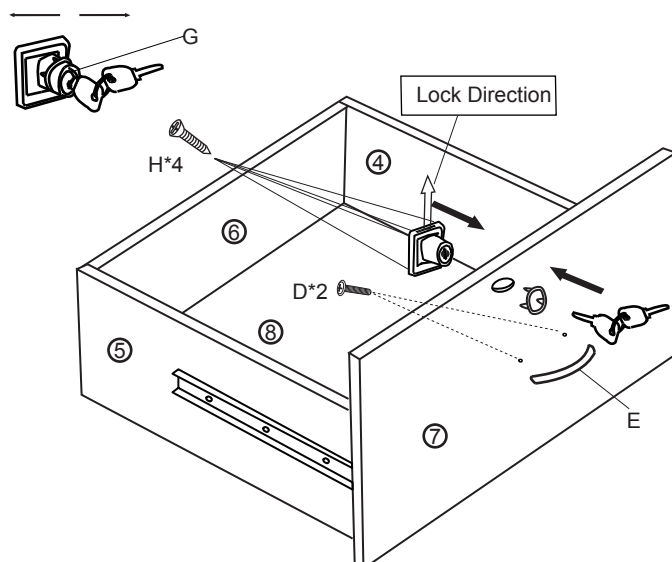


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**



7

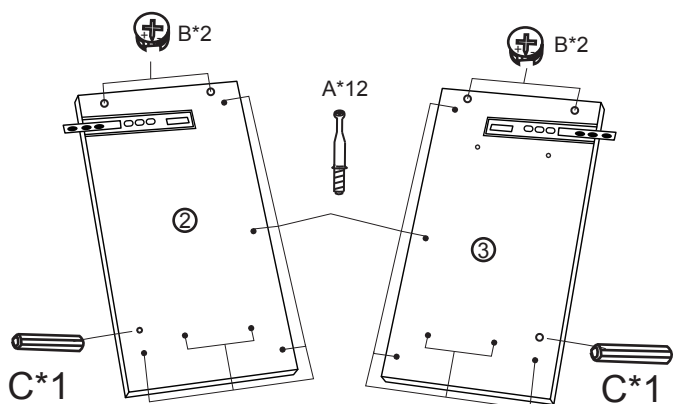


8

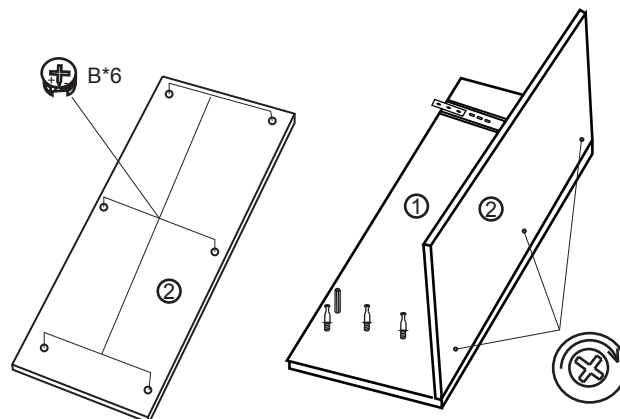


9

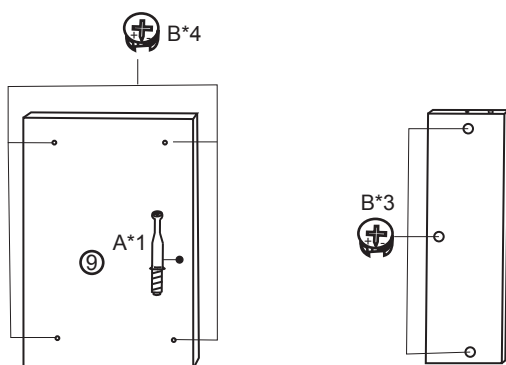


10

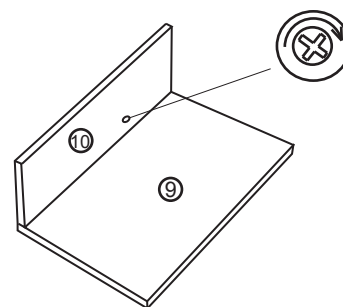

11

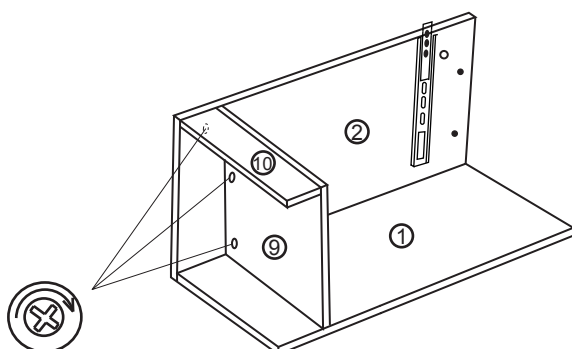


12

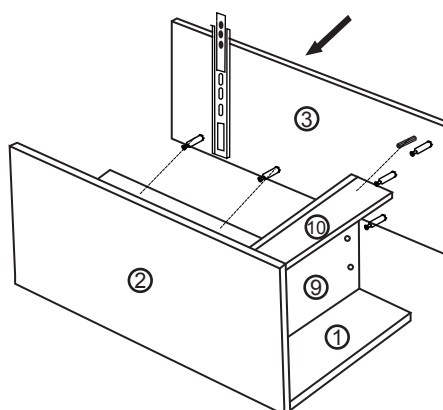


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


13

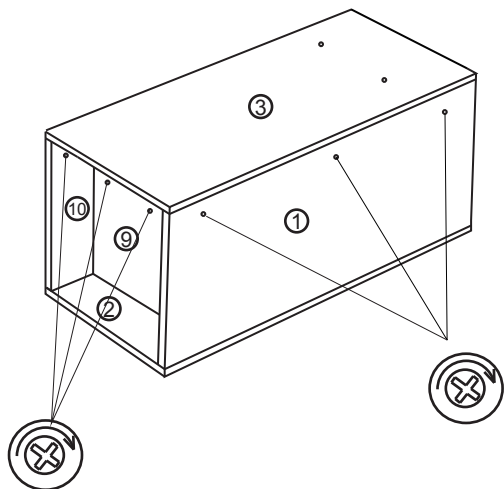


14

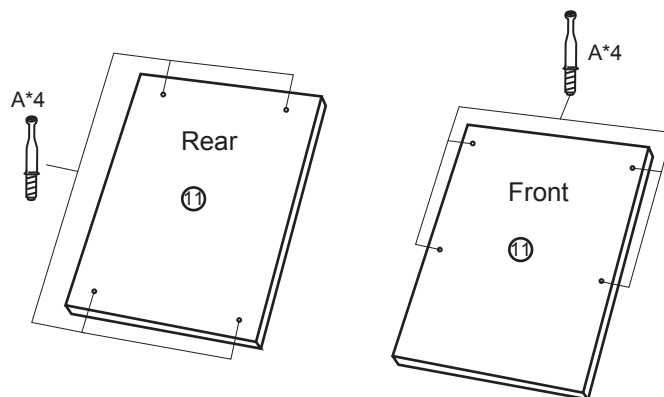


15

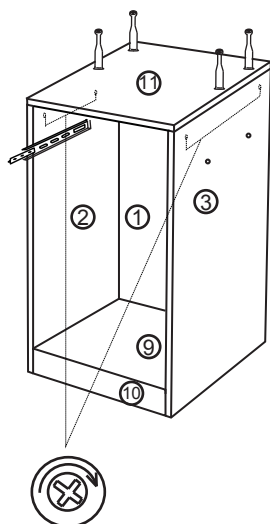

16

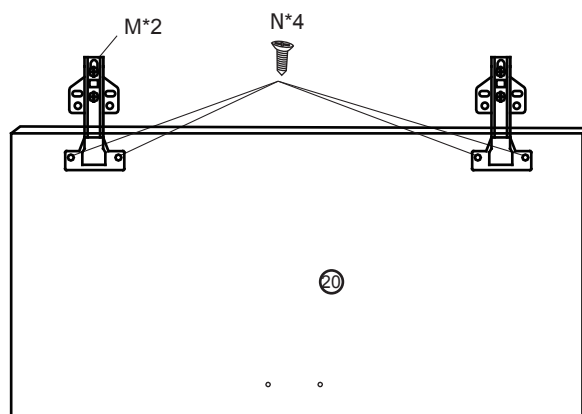


17

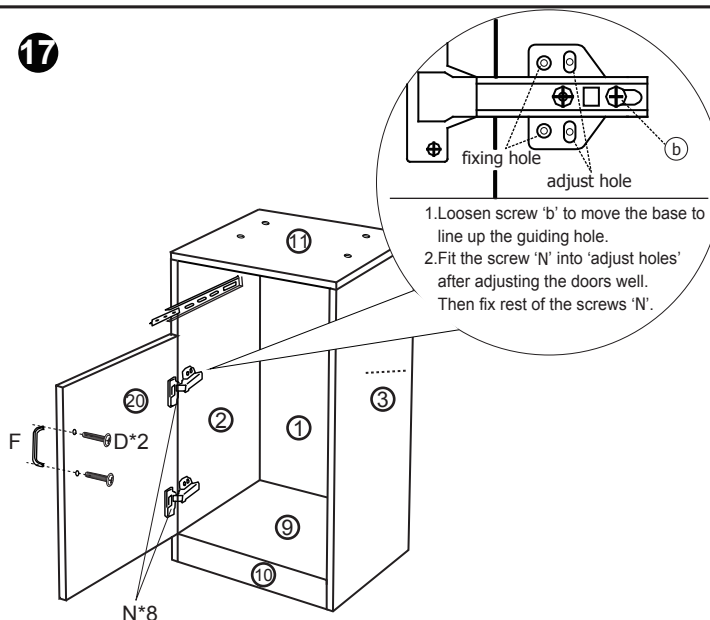

18

How to adjust the doors.

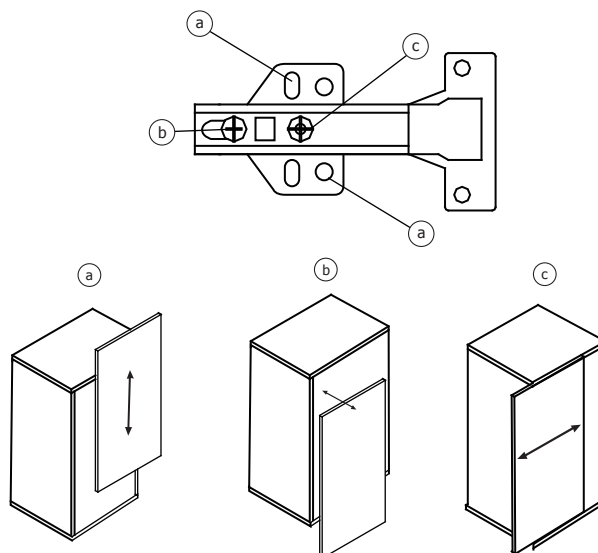

DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.

19

✓

EDGE

X

EDGE

20

✓

EDGE

X

EDGE

21

✓

EDGE

X

EDGE


22

23


24

**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


25

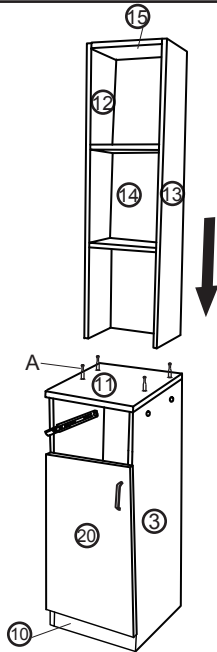


26

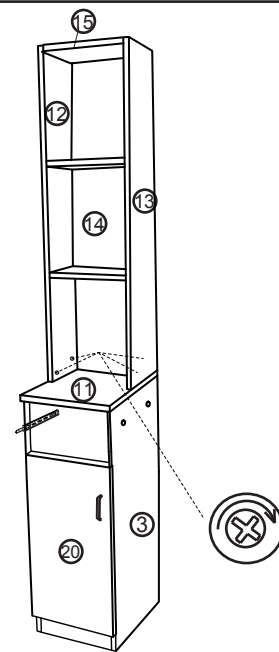


27

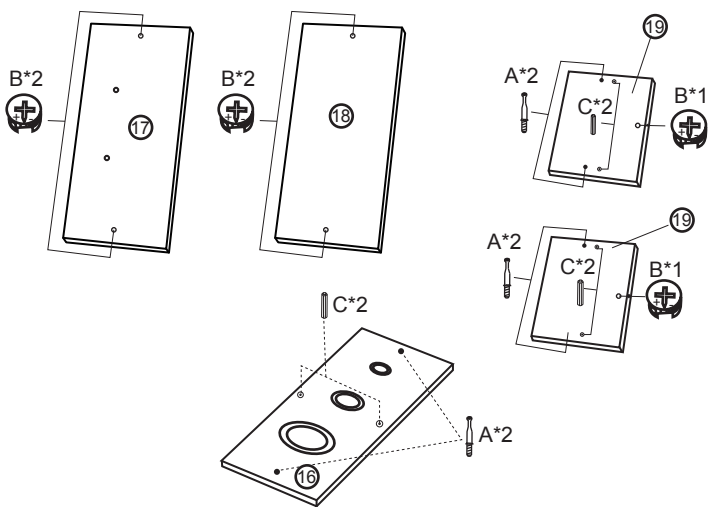


28

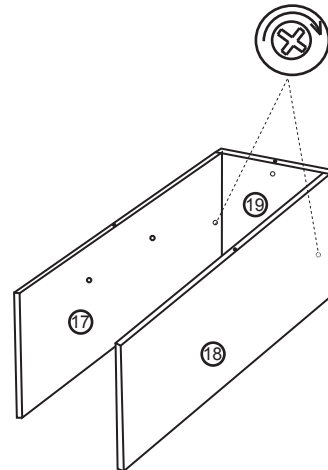

29

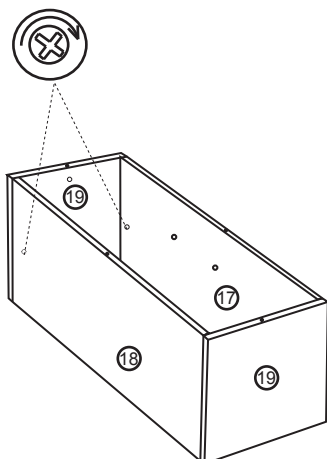


30

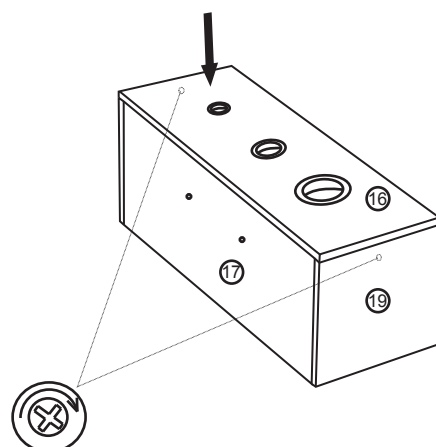


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**

31

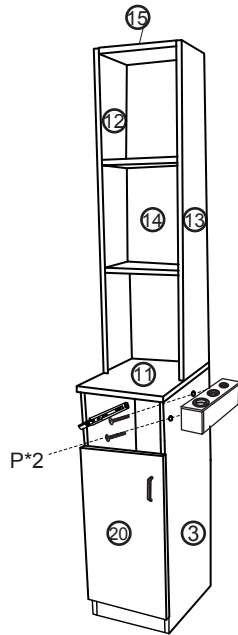


32

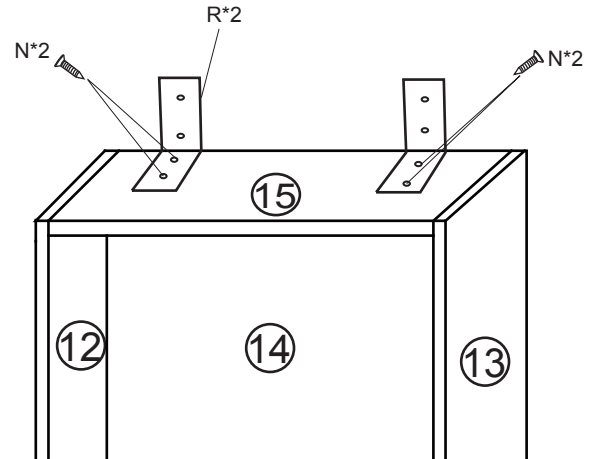


33

Lean the back against the wall, and mark the wall.

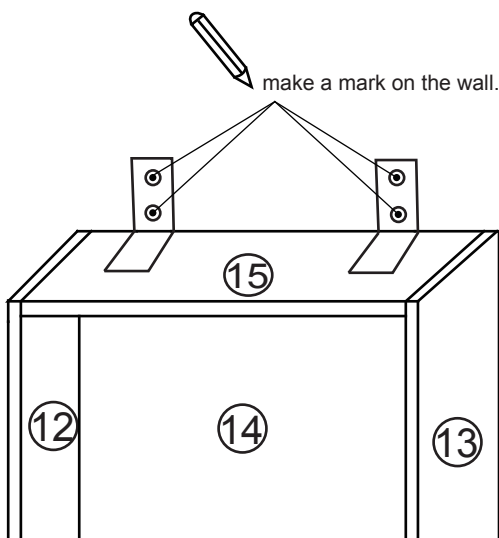


34


Drill into the wall.

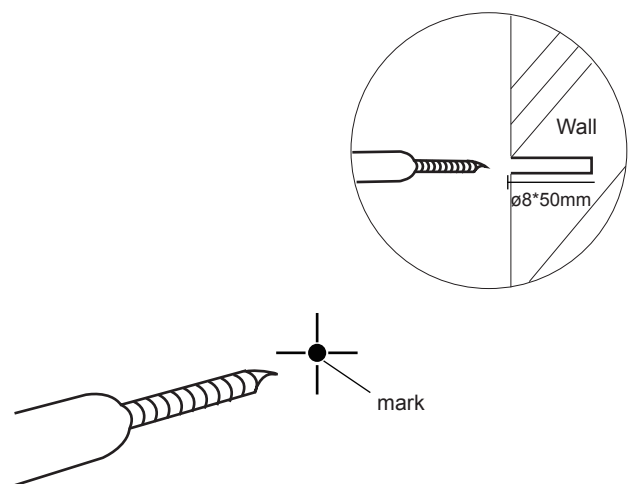

35

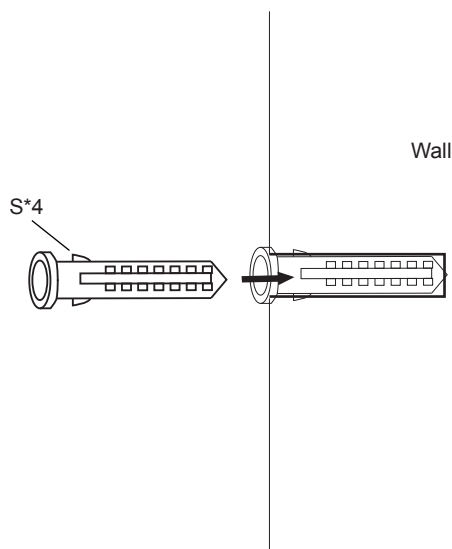


36

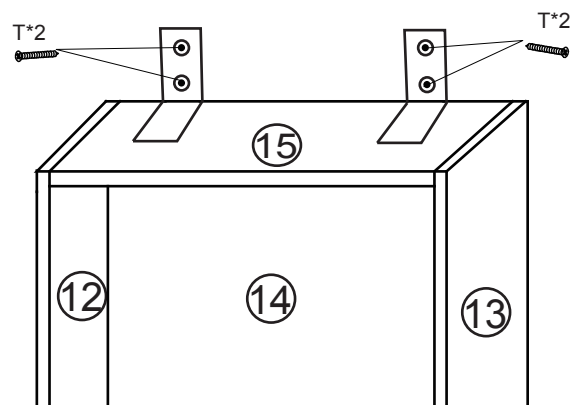


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**

37

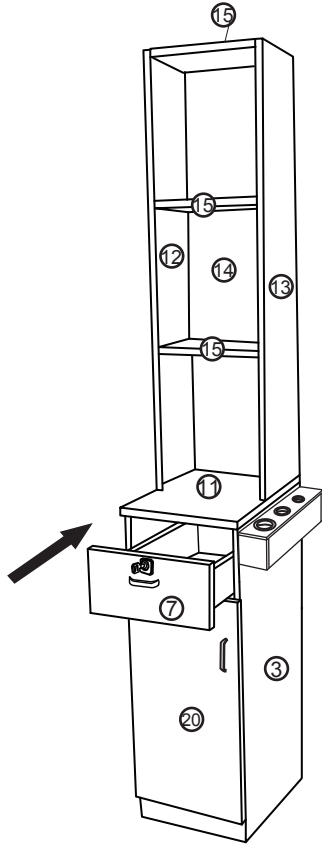

38

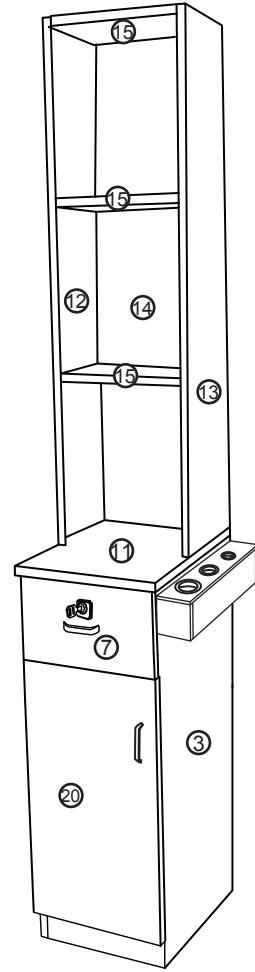

Note: Please fit cam covers (U) onto visible/exposed
cams (B) to complete assembly.