

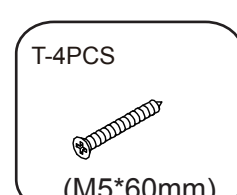
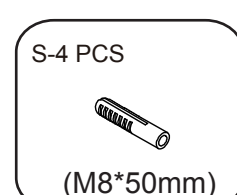
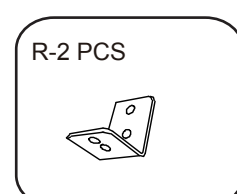
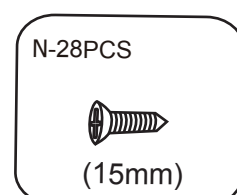
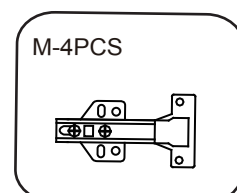
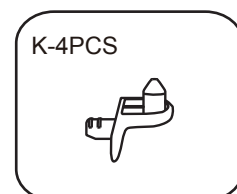
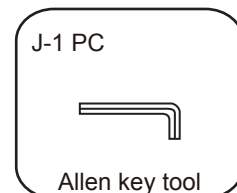
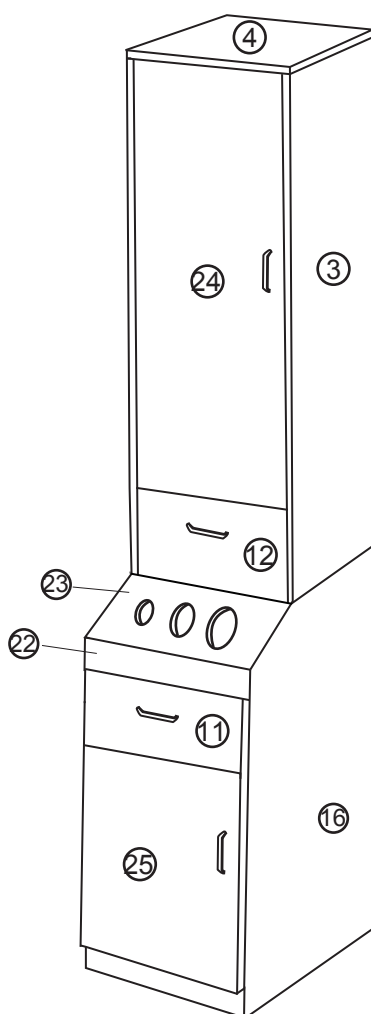
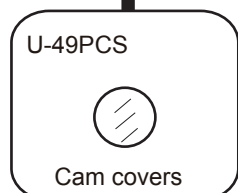
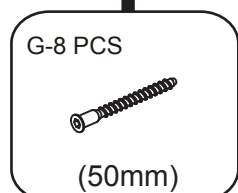
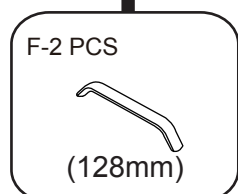
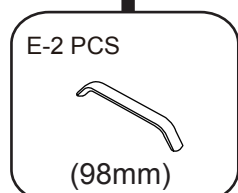
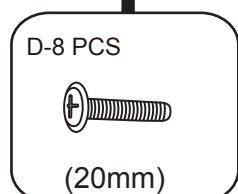
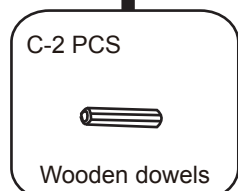
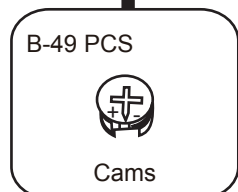


ASSEMBLY INSTRUCTIONS













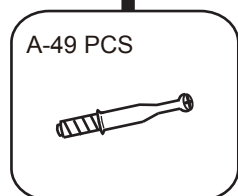














6154-5207

Additional tools required:
1 x Philips cross-head screwdriver.

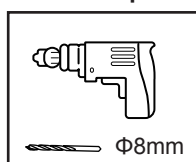



1x Drill & 1x 8mm wood drill bit.

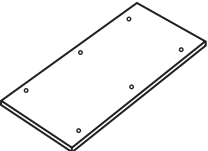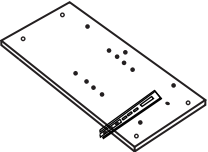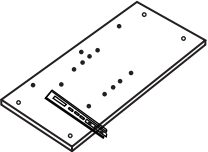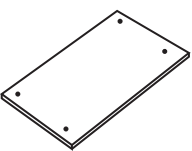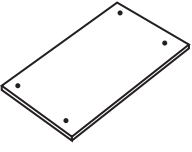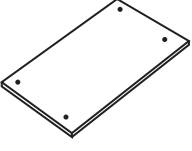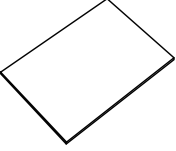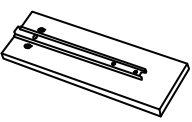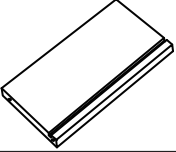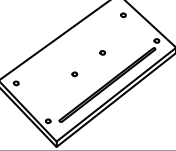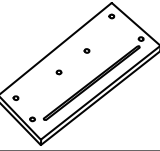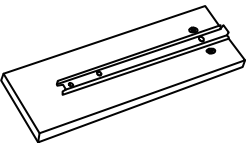	985*368*16	1	①
	985*284*16	1	②
	985*284*16	1	③
	402*303*16	1	④
	368*265*16	1	⑤
	368*265*16	1	⑥
	319*244*5	1	⑦
	250*90*16	1	⑧
	250*90*16	1	⑨
	309*90*16	2	⑩
	399*150*16	1	⑪
	399*120*16	1	⑫
	300*90*16	1	⑬

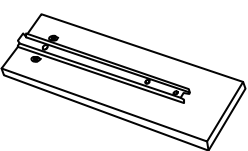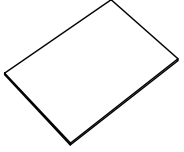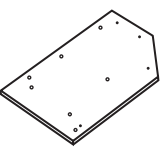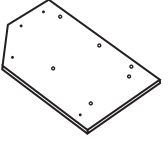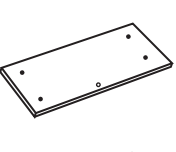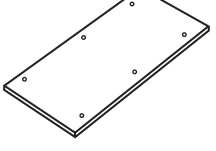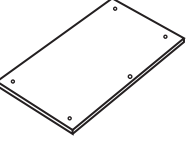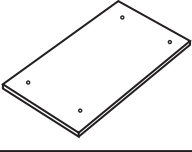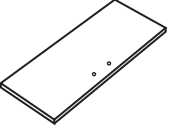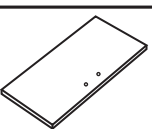
	300*90*16	1	⑭
	319*294*5	1	⑮
	793*434*16	1	⑯
	793*434*16	1	⑰
	368*80*16	1	⑱
	793*368*16	1	⑲
	415*368*16	1	⑳
	402*303*16	1	㉑
	402*52*16	1	㉒
	402*182*16	1	㉓
	827*399*16	1	㉔
	440*399*16	1	㉕

**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


1

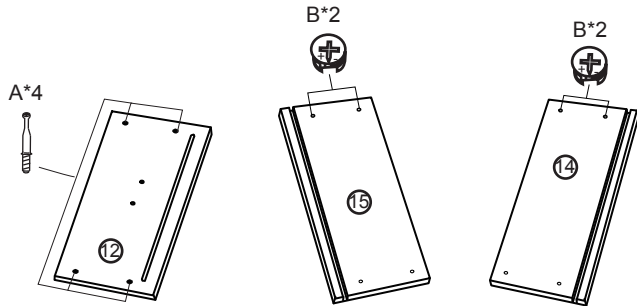


2

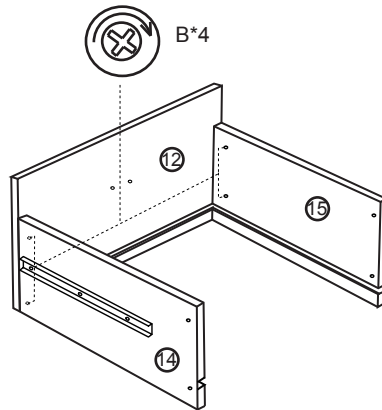


3

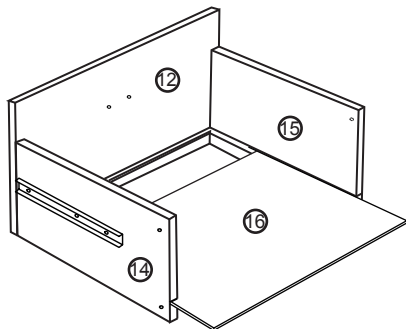



4

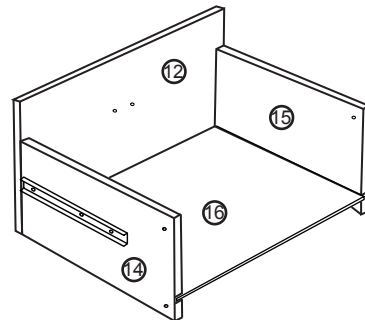

5


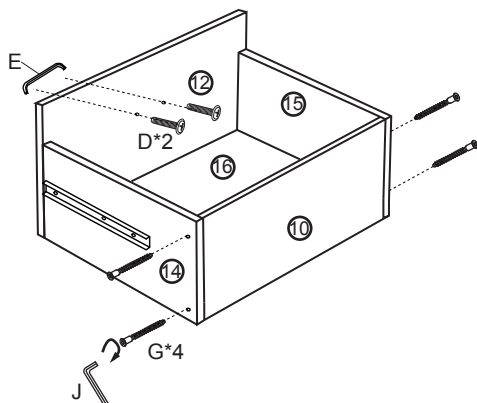


6

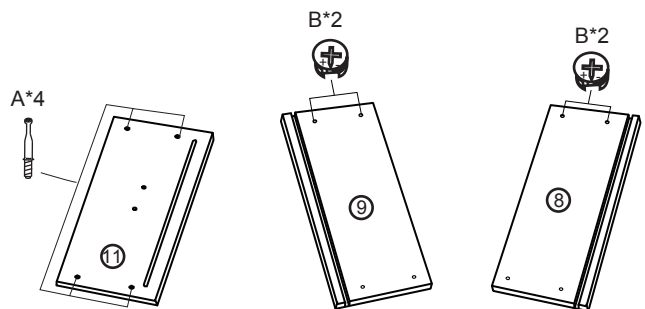


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


7

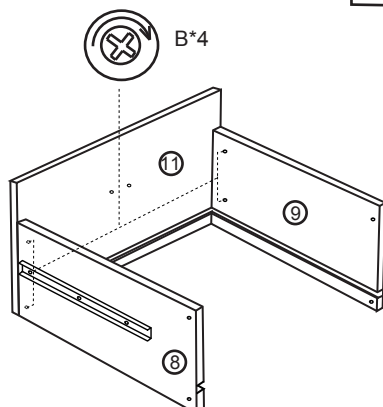



8

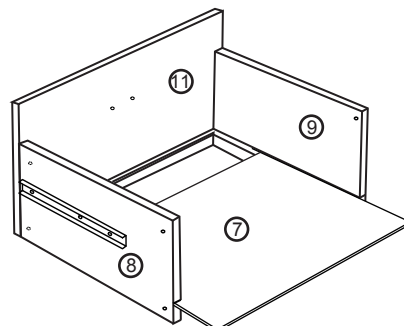



9

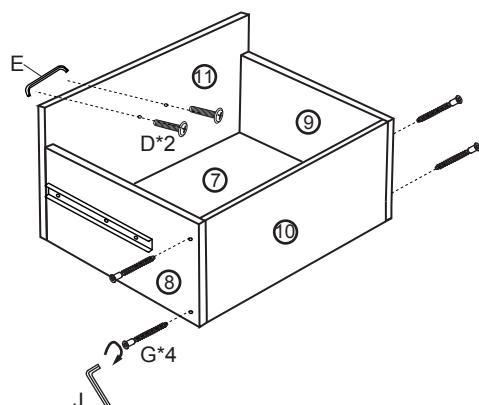



10

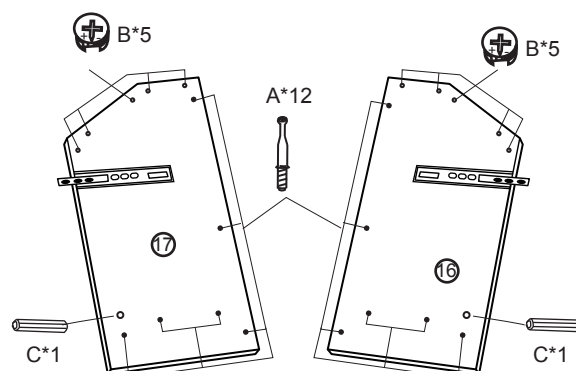

11

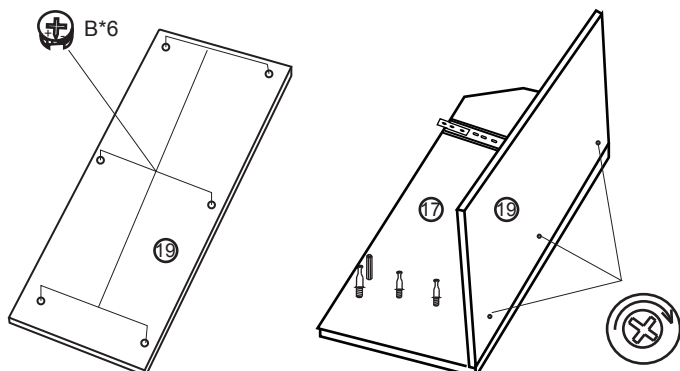



12

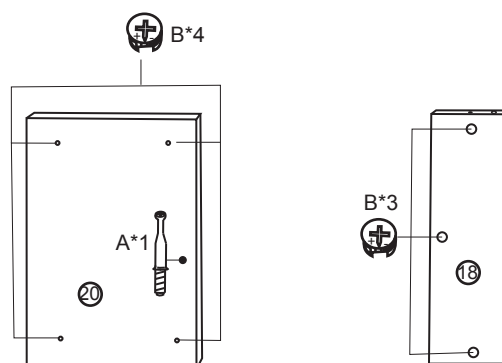


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


13

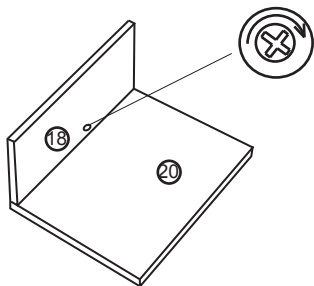


14

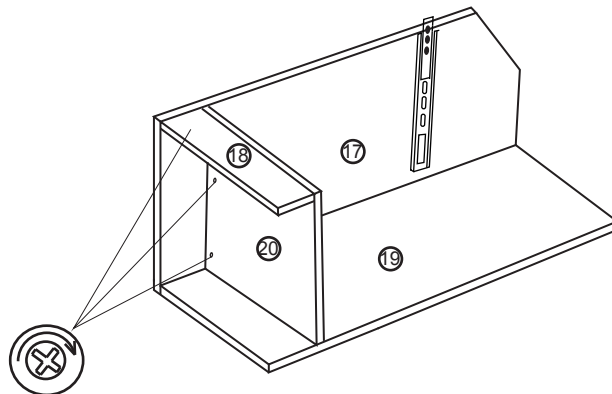


15

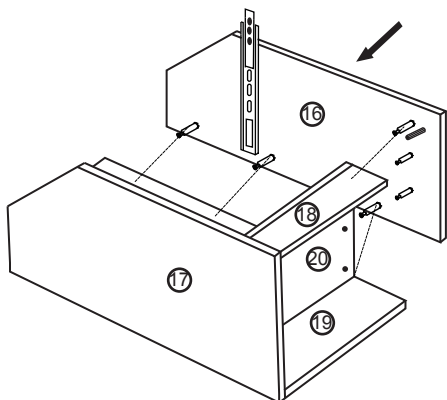


16

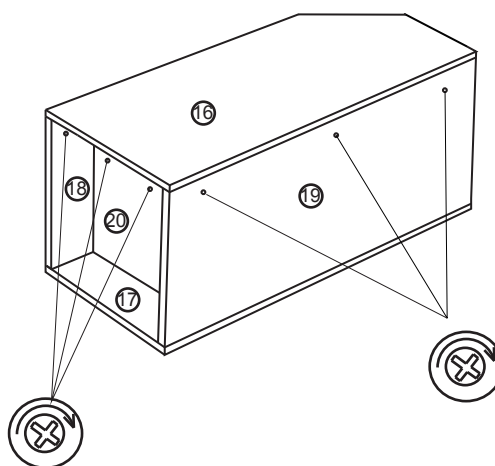

17

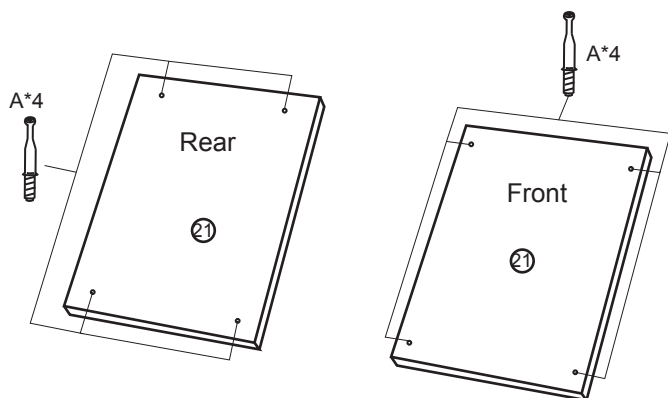


18

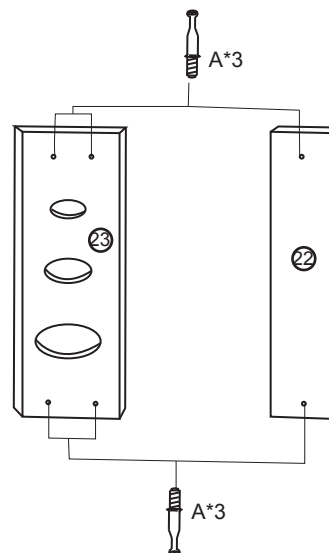


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


19

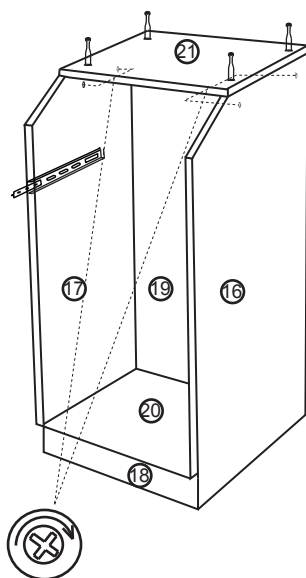



20

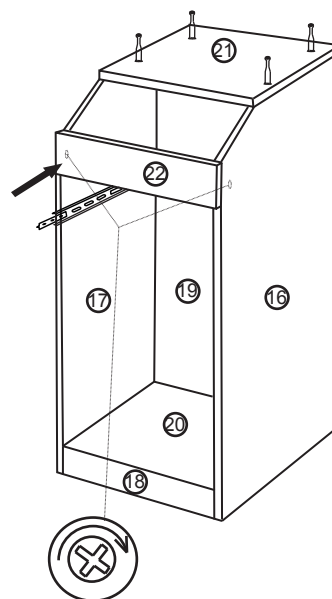



21

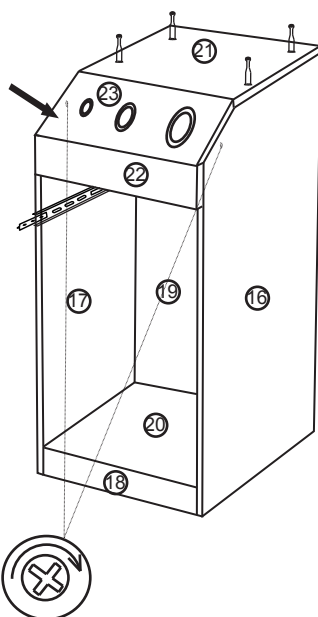


22

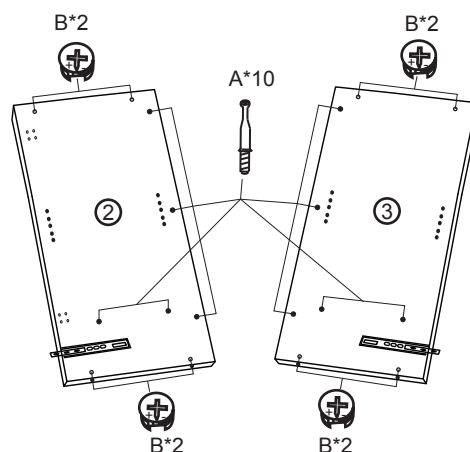

23

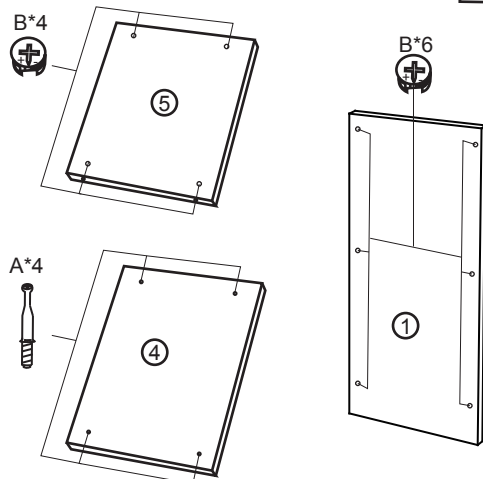


24

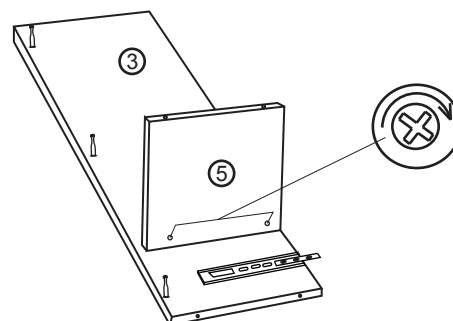


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


25

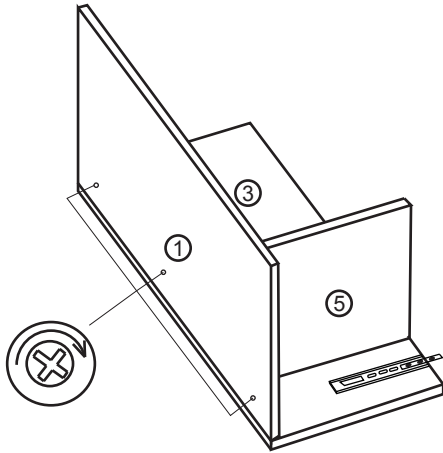


26

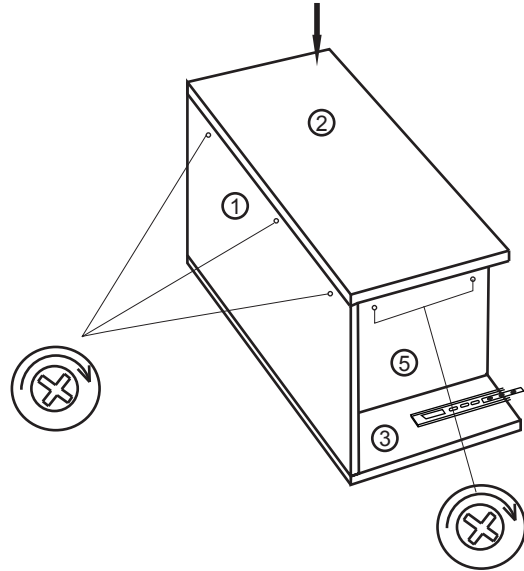


27

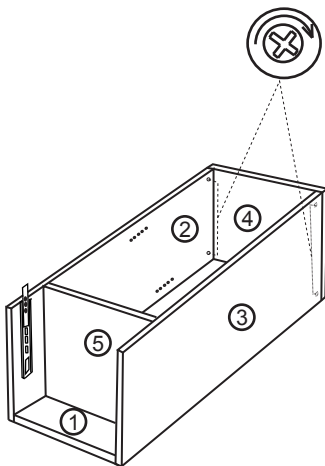


28

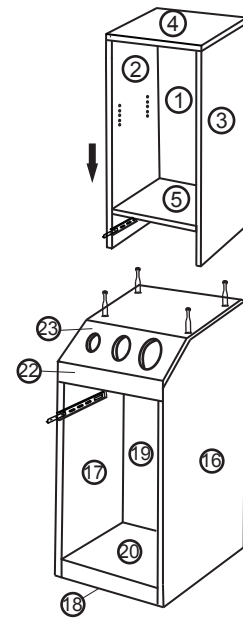

29

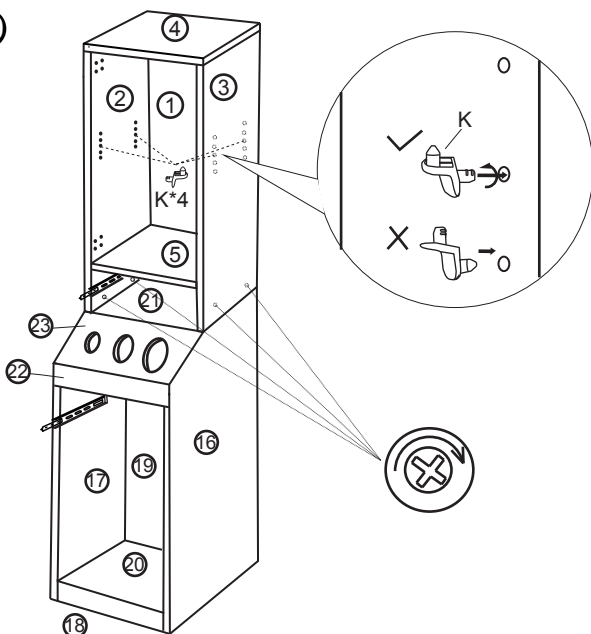


30

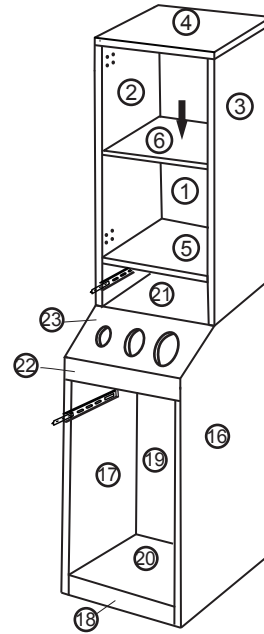


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**

31

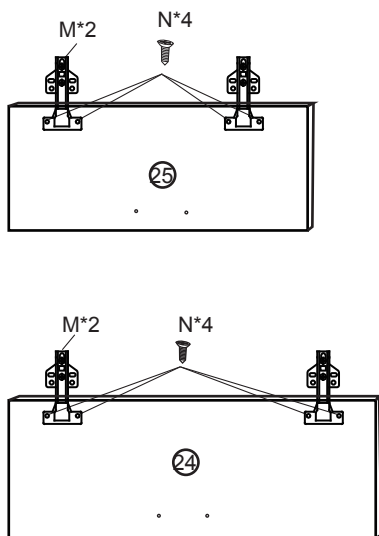


32

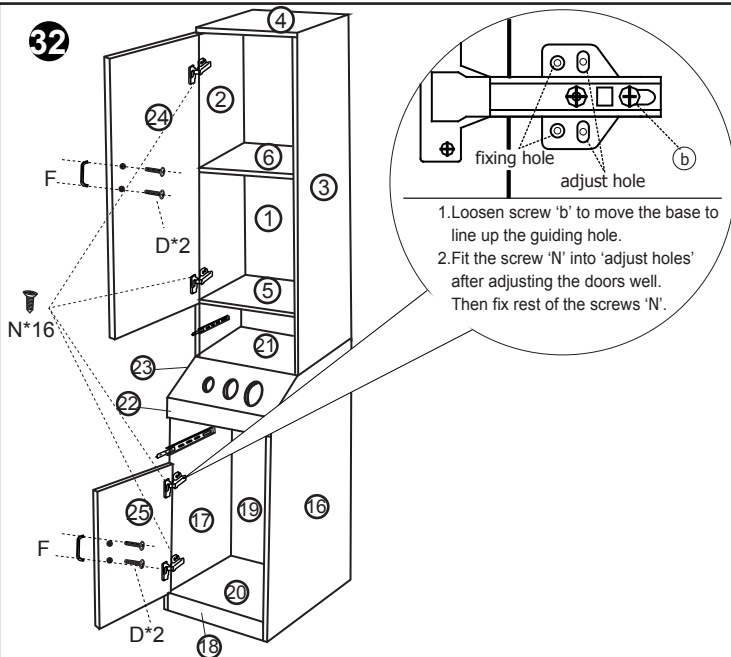


33


How to adjust the doors.

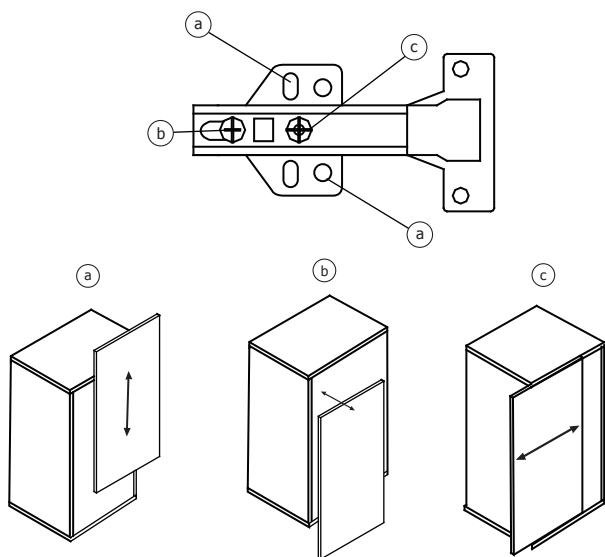

34

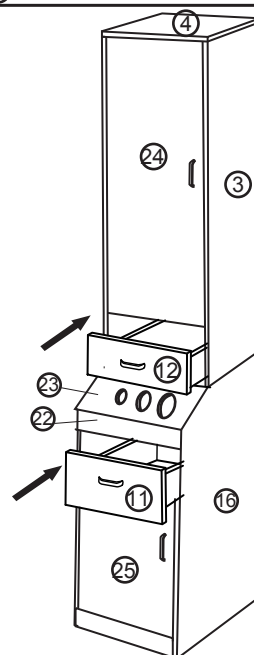


35

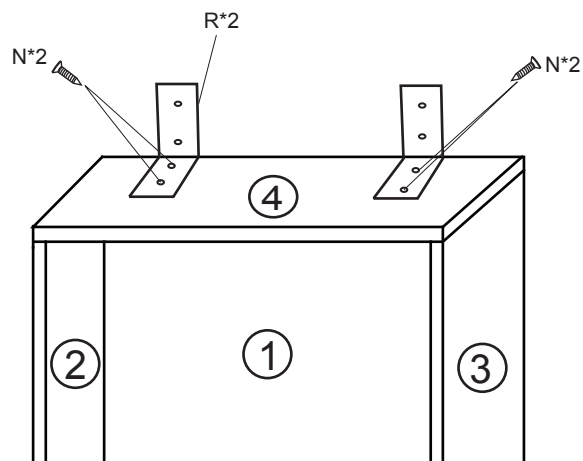


36

Lean the back against the wall, and mark the wall.

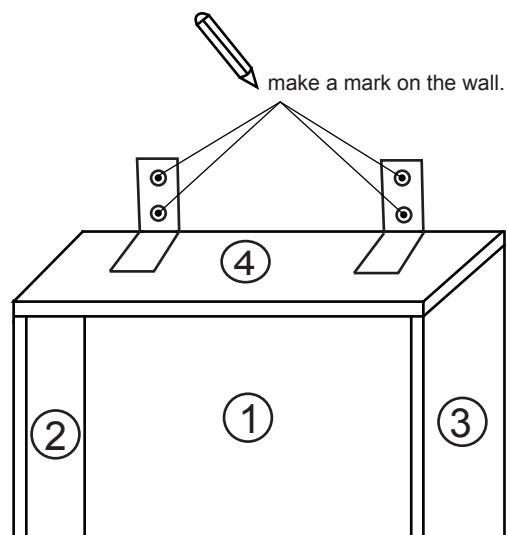


**DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS
-TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.
Before use please check all fixings are tightened fully.**


37 Drill into the wall.

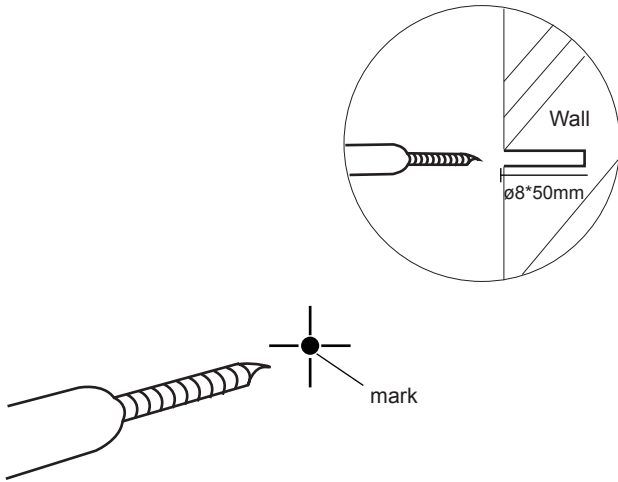


38

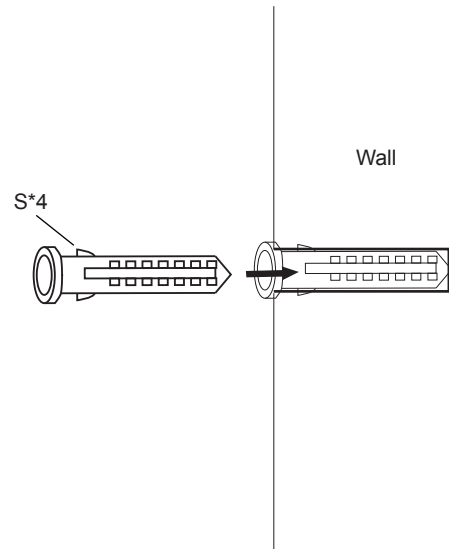

39

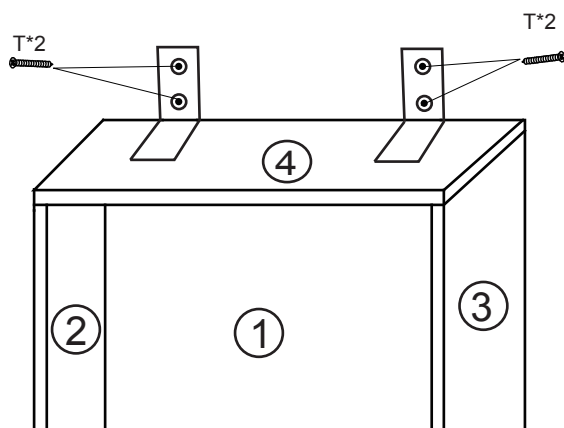

40

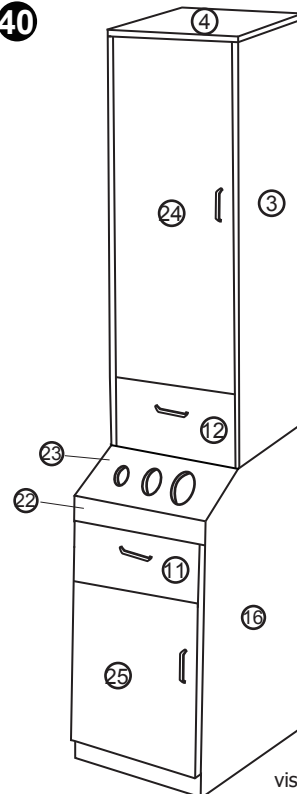

Note: Please fit cam covers (U) onto visible/exposed cams (B) to complete assembly.